

## PLICSMOBILE 80 series

Version, available since	Description
<p><b>1.3.0</b> <b>6/2010</b></p>	<p><b>Function extensions</b></p> <ul style="list-style-type: none"> <li>- Daily restart                             <ul style="list-style-type: none"> <li>o Daily restart active</li> </ul> </li> <li>- Provider selection                             <ul style="list-style-type: none"> <li>o Provider selection possible</li> </ul> </li> </ul> <p><b>Error corrections</b></p> <ul style="list-style-type: none"> <li>- Mobile radio                             <ul style="list-style-type: none"> <li>o Improvement of mobile communication in case of interference</li> </ul> </li> <li>- PLICSMOBILE B81                             <ul style="list-style-type: none"> <li>o Incorrect battery charge level corrected</li> </ul> </li> </ul>
<p><b>1.2.0</b> <b>4/2019</b></p>	<p><b>Function extensions</b></p> <ul style="list-style-type: none"> <li>- HART Master                             <ul style="list-style-type: none"> <li>o Change-over between Primary and Secondary Master possible</li> </ul> </li> <li>- Roaming                             <ul style="list-style-type: none"> <li>o Reset value set to "ON"</li> </ul> </li> </ul> <p><b>Error corrections</b></p> <ul style="list-style-type: none"> <li>- Error status HART variables                             <ul style="list-style-type: none"> <li>o The error status of the HART variables was not evaluated correctly</li> </ul> </li> </ul>
<p><b>1.1.0</b> <b>3/2018</b></p>	<p><b>Function extensions</b></p> <ul style="list-style-type: none"> <li>- Power saving function                             <ul style="list-style-type: none"> <li>o The sensors are only switched on as long as necessary. This increases the battery lifetime.</li> </ul> </li> <li>- New power scheme permanent operation/power saving mode (combined)                             <ul style="list-style-type: none"> <li>o New power scheme where PLICSMOBILE decides on the active power scheme.</li> </ul> </li> <li>- Battery/Accumulator warning messageBattery/Accumulator warning message                             <ul style="list-style-type: none"> <li>o PLICSMOBILE can send a warning message by falling below a battery/accumulator level.</li> </ul> </li> <li>- SMS                             <ul style="list-style-type: none"> <li>o In the SMS, the measured values selected in the measurement loop are transmitted.</li> </ul> </li> <li>- Event log                             <ul style="list-style-type: none"> <li>o Texts in the event log switched over to English.</li> </ul> </li> </ul> <p><b>Error corrections</b></p> <ul style="list-style-type: none"> <li>- Percent and lin. percent in the VEGA Inventory System</li> </ul>

## Overview of the software versions

Version, available since	Description
	<ul style="list-style-type: none"> <li>○ Exchange of percent and lin. percent removed while transmitting to VEGA Inventory System.</li> <li>- Remote access via dialing connection CSD               <ul style="list-style-type: none"> <li>○ Remote access via CSD is possible again.</li> </ul> </li> <li>- 2. HART Master               <ul style="list-style-type: none"> <li>○ The use of a 2. HART master is now possible.</li> </ul> </li> </ul>
<b>1.0.1, 5/2017</b>	<b>Error corrections</b> <ul style="list-style-type: none"> <li>- Software update               <ul style="list-style-type: none"> <li>○ A software update without inserted SIM card is not possible</li> </ul> </li> <li>- HART variables               <ul style="list-style-type: none"> <li>○ While selecting the values to be transmitted there were transposed digits. Selected value to be sent -Actual value which is sent                    PV – QV                    SV – PV                    TV – SV                    QV – TV                    In addition, the units of SV, TV and QV were not sent.</li> </ul> </li> <li>- Bluetooth               <ul style="list-style-type: none"> <li>○ Was Bluetooth switched off and the instrument was switched off and on again, then PLICSMOBILE does not start correctly</li> </ul> </li> <li>- Test transmission               <ul style="list-style-type: none"> <li>○ During a test transmission with the key "Send" the sensor is switched on for a sufficient time in the power saving mode</li> </ul> </li> <li>- Measured value transmission VEGA Inventory System               <ul style="list-style-type: none"> <li>○ With a PLICSMOBILE with up to 15 measuring points, only the first 8 measuring point were sent</li> </ul> </li> </ul>
<b>1.0.0, 4/2017</b>	<b>First sales version</b>

### Legend:

Name	Description
Version	xx.yy.zz xx: Compatibility version. Will be increased when the compatibility to the previous version is no longer given. Value range 0 ... 99. yy: Function extension version. Will be increased when new functions or function changes were carried out on the previous version. Also errors can have been corrected with a function change. Value range 0 ... 99. zz: Error correction version. Will be increased when only errors were corrected on the previous version. Value range 0 ... 99.

## Overview of the software versions

Name	Description
available since	Month/Year
Device Rev.	Version number of the instrument defined by Fieldbus. Consecutive integral number Will be increased if in the "Application Layer" modifications were carried out, e.g. new commands, modifications in the data structure in a command.